


3. TESTING

Once the SimpleWan unit is plugged in, wait **1 minute** (It is recommended you reboot your computer you are using to set up during this time to get a fresh DHCP lease). Then open a browser and type in www.google.com, you will see one of two screens come up. Either a testing screen as in Fig. 1 or the Failed to Detect Screen as in Fig. 2

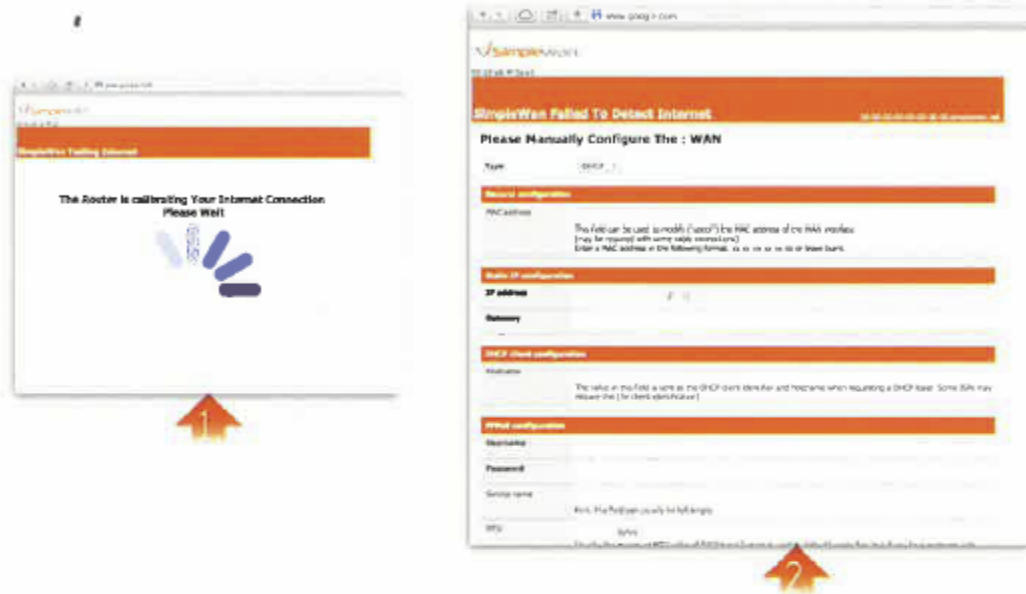

If you see the testing screen, wait **1-2 minutes**, once it's finished you will be connected to www.google.com, you are finished.

If the Failed to Detect Screen appears, you may need some basic information from your ISP.

- Your Static IP Address
- PPPOE/PPTP Username and Password

Input this information and save. **IMPORTANT NOTE:** If you input information on this screen, and it successfully connects the information will be saved to the dashboard on completion. You should never have to enter this information again. After you have saved, go back to your browser and type in www.google.com. The testing page will now come up; wait **2-3 minutes**. When Google comes up, you are online. It's that **simple...**

Front Light Key:

- 1 Solid Light: Unit has power
- 2 Solid Lights: The Internet has been detected
3. 1 Solid Light, 1 Flashing Light: Testing Internet connection in progress
4. 3 Solid Lights: System is up and operational

For additional support contact us at support@simplewan.com
or call us at 855-GET-A-WAN

